


**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 13-P Steckdose
lt. DIN/ISO Norm 11446**


**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 11446 prise 13-P**

**Fitting instructions electric wiringkit
towbar with 13-P socket up to
DIN/ISO norm 11446**

**Montage-handleiding elektrokabelset voor
trekhaak met 13-P contactdoos
vlg. DIN/ISO norm 11446**

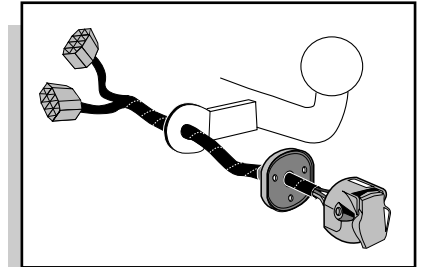

FORD MONDEO SEDAN/HATCHBACK 2001-

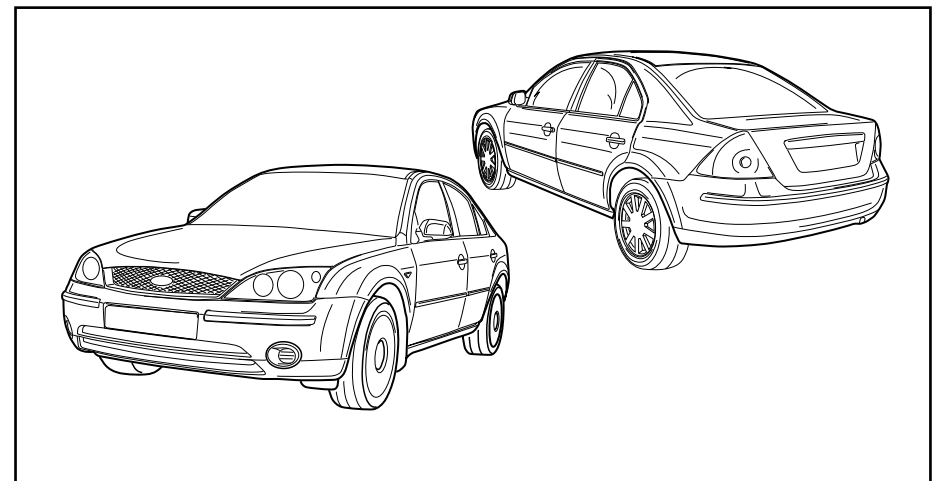




Bestel Nr.: FR-010-DB

* Teilliste


* Liste de pieces

* Part list


* Onderdelenlijst

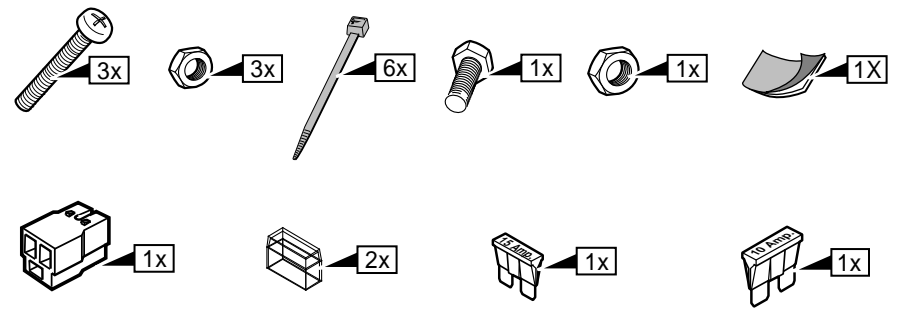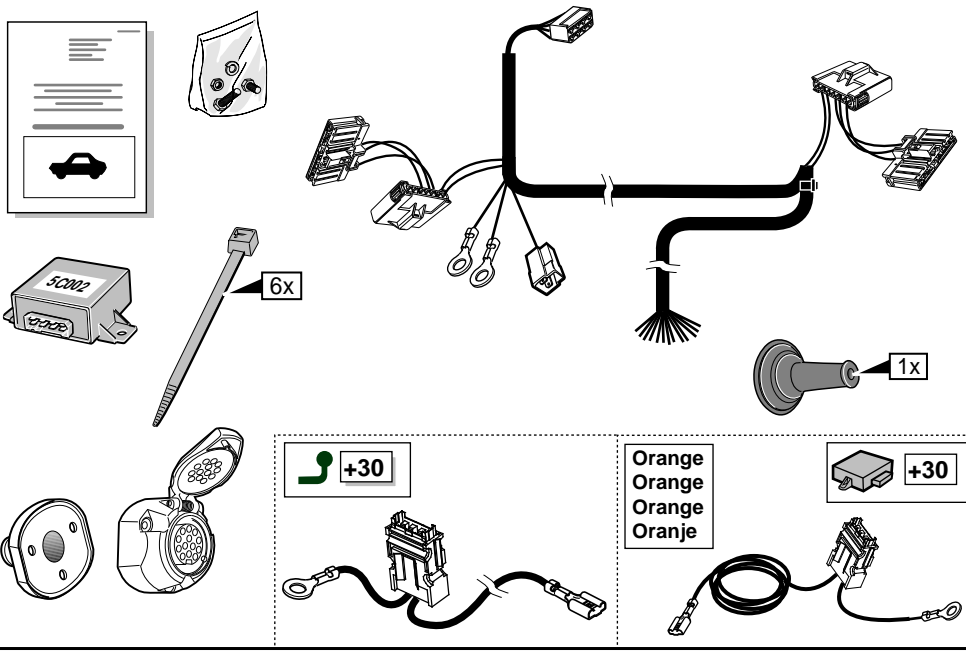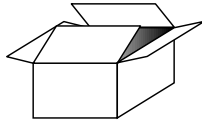


1 HATCHBACK + SEDAN

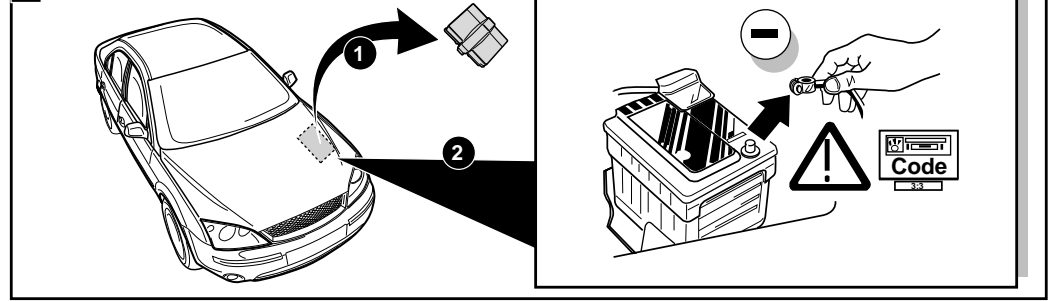


2

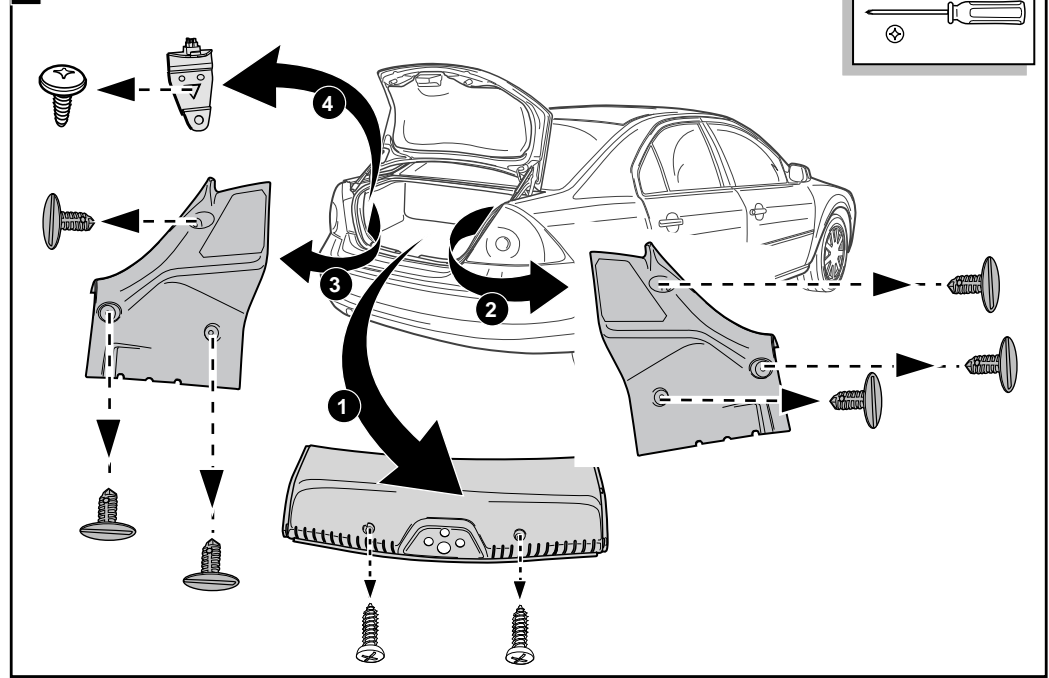

3

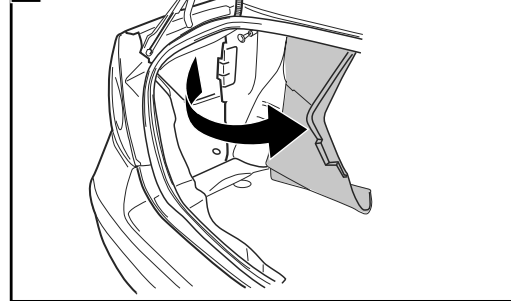

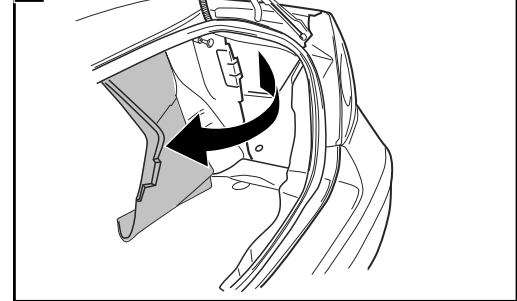

4




INFO


'E' =  +30

'D' =  +30


15+  15 amp.  +30
Option Optie

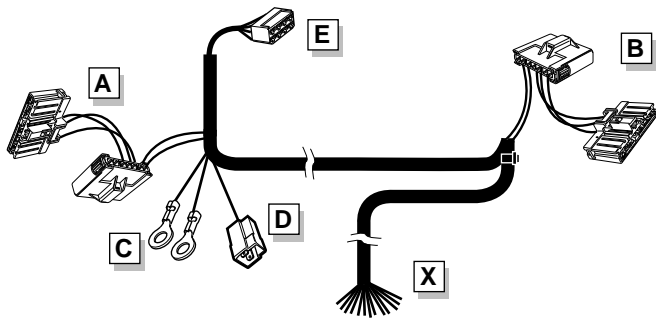


ROUTING

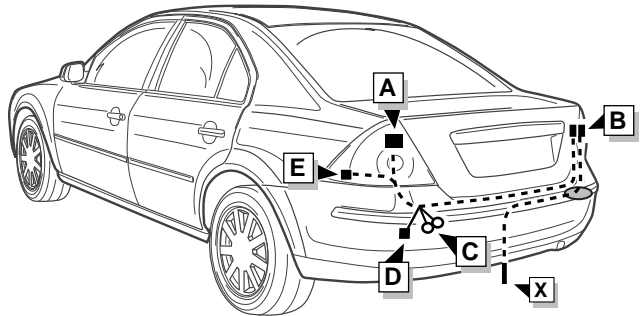


23

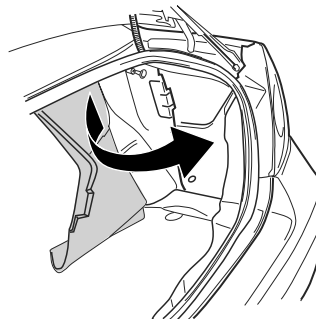


24

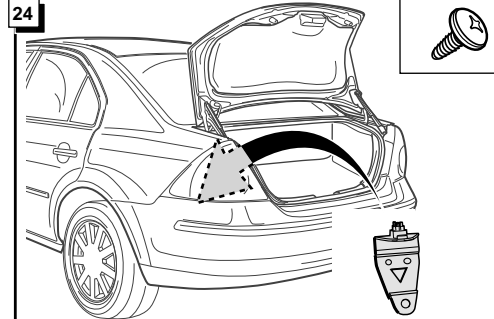


5




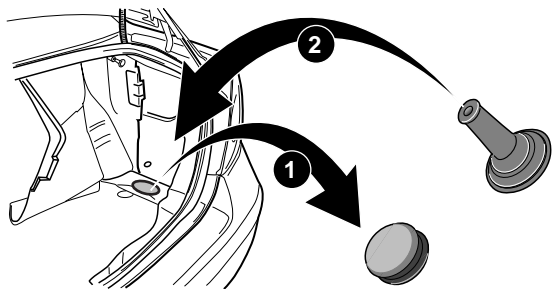


26

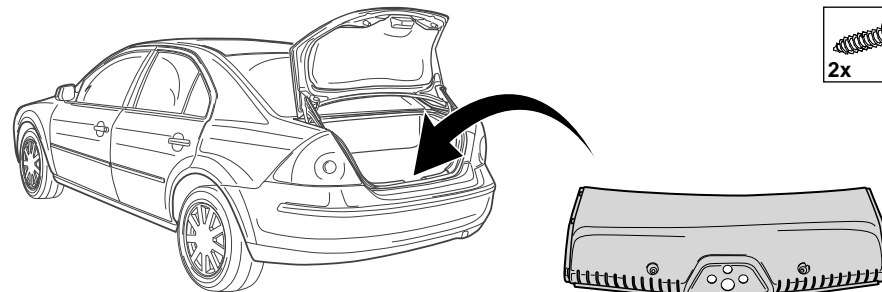



6

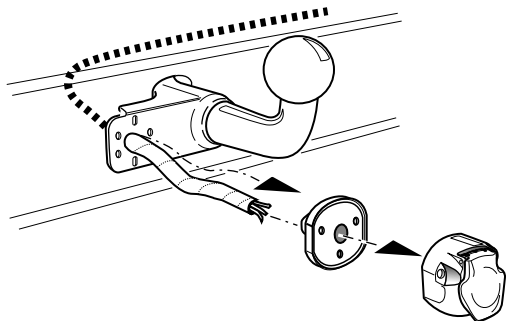

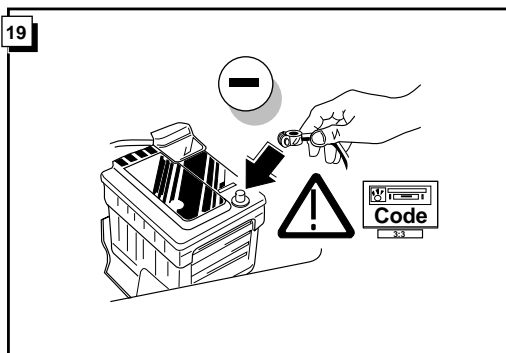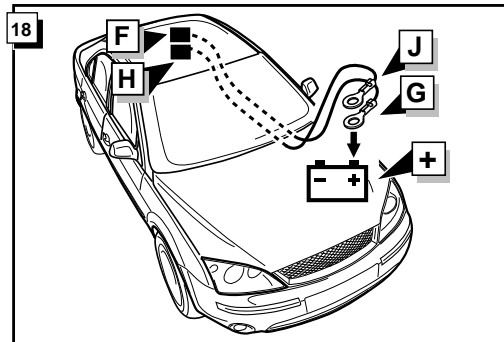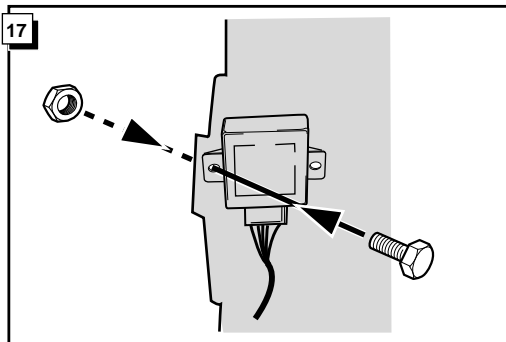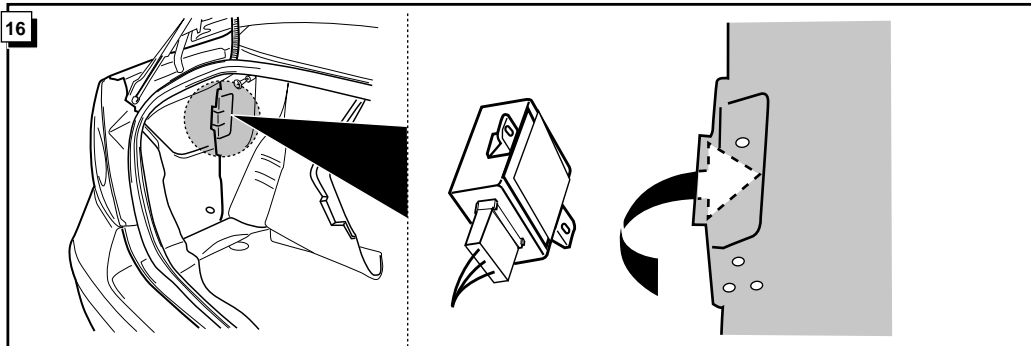

20

**! FUNKTIONEN KONTROLLIEREN !
 CONTRÔLER LES FONCTIONS !
 CHECK FUNCTIONS !
 CONTROLEER FUNCTIES !**

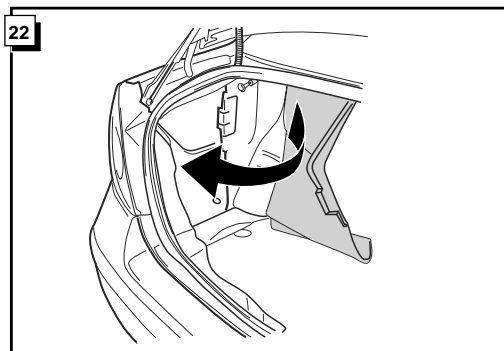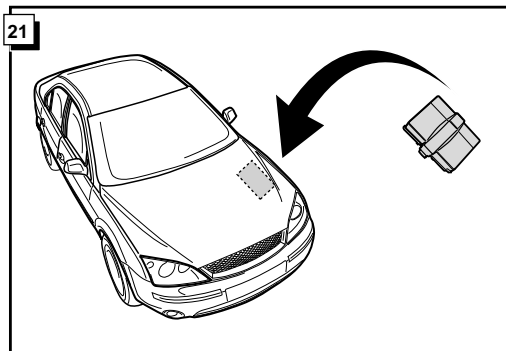

INFO Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting

DIN/ISO 11446	D	F	GB	NL	
←	1/L	gelb	jaune	yellow	geel
↶	2	blau	bleu	blue	blauw
↷	2a	grau	gris	grey	grijs
⏏	1-8	weiß	blanc	white	wit
→	4/R	grün	vert	green	groen
☀	5/58-R	braun	marron	brown	bruin
STOP	6/54	rot	rouge	red	rood
☀	7/58-L	schwarz	noir	black	zwart
↶↷	8	schwarz/rot	noir/rouge	black/red	zwart/rood
30+	9	braun/weiß	marron/blanc	brown/white	bruin/wit
15+	10	rot	rouge	red	rood
⏏	11	weiß	blanc	white	wit
↶↷	12	rot/blau	rouge/bleu	red/blue	rood/blauw
⏏	13	weiß	blanc	white	wit

