




Montage-handleiding elektrokabelset voor
trekhaak met 13-P contactdoos
vlgs. DIN/ISO norm 11446


Fitting instructions electric wiringkit
towbar with 13-P socket up to
DIN/ISO norm 11446

Einbauanleitung Elektrosatz
Anhängervorrichtung mit 13-P Steckdose
lt. DIN/ISO Norm 11446

Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme DIN/ISO 11446
prise 13-P

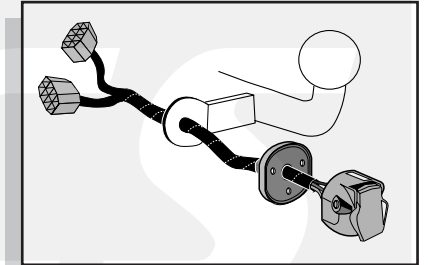

MERCEDES S202 1996-/W202 1993-

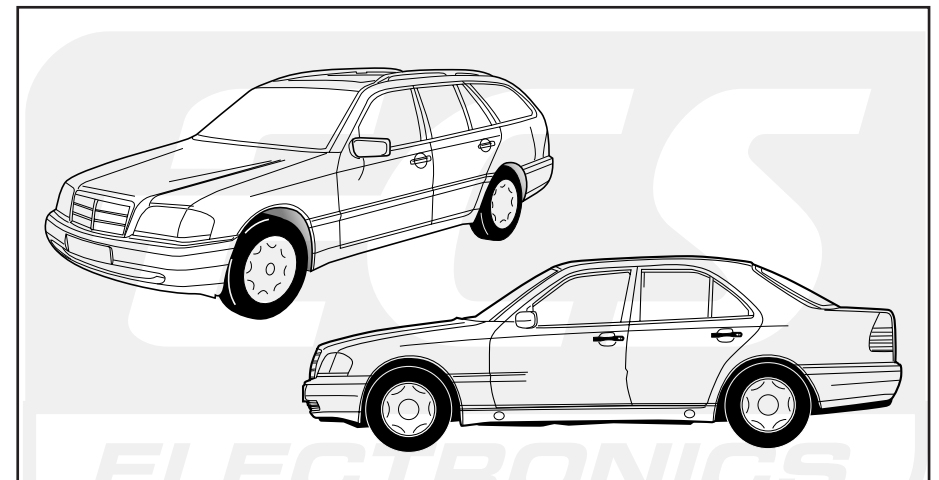



Bestel Nr.: MB-924-L





* Teilliste








* Liste de pieces






* Part list

* Onderdelenlijst



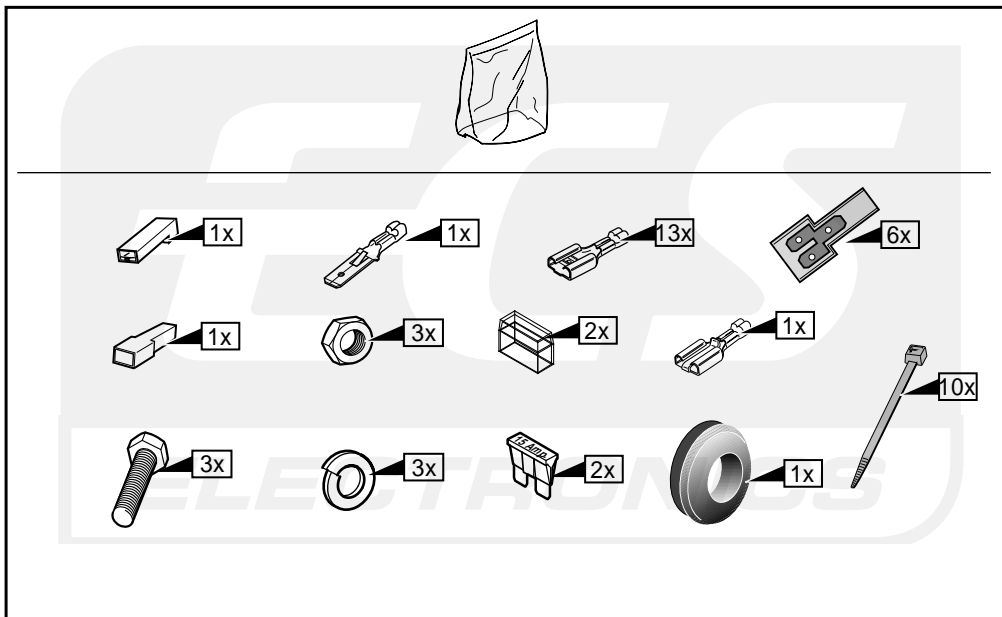
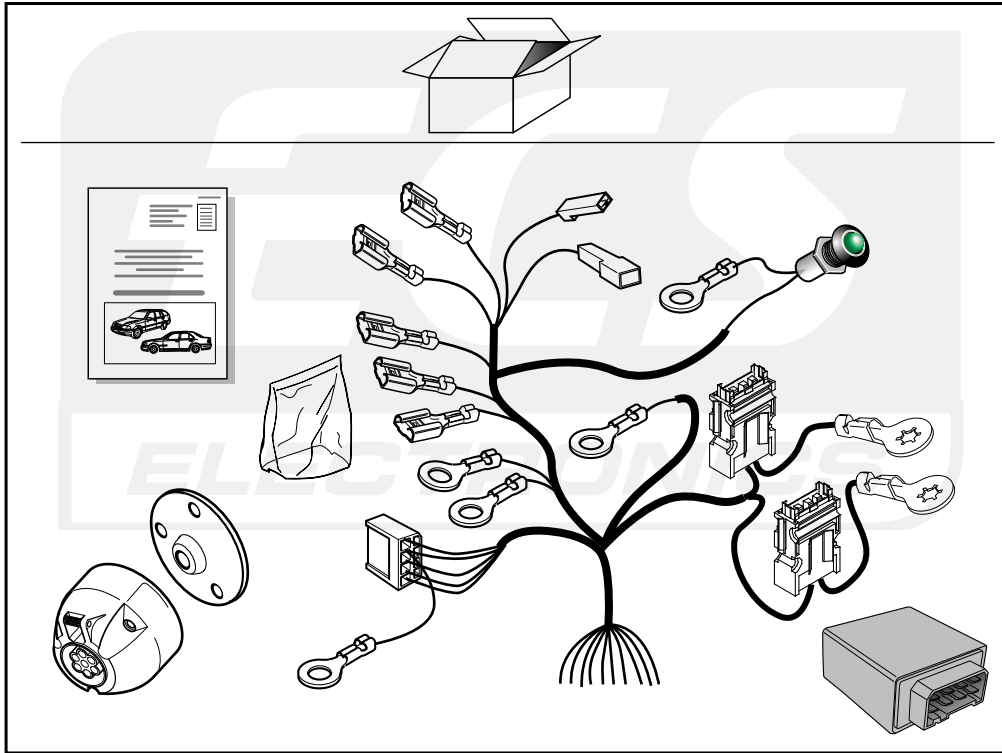


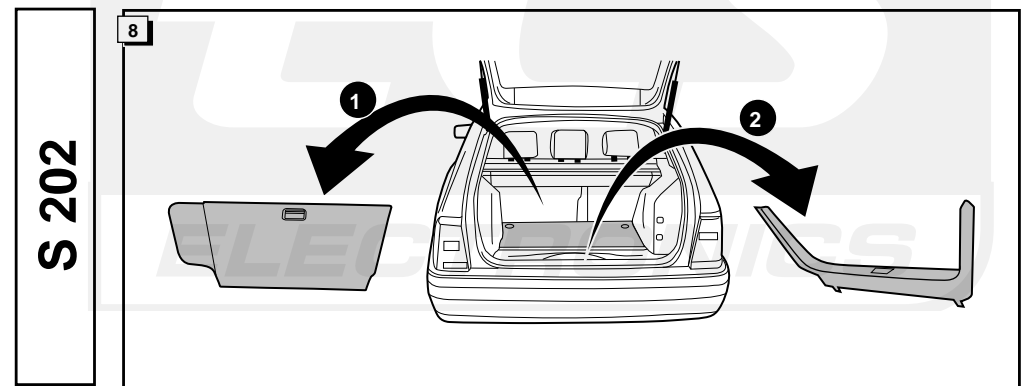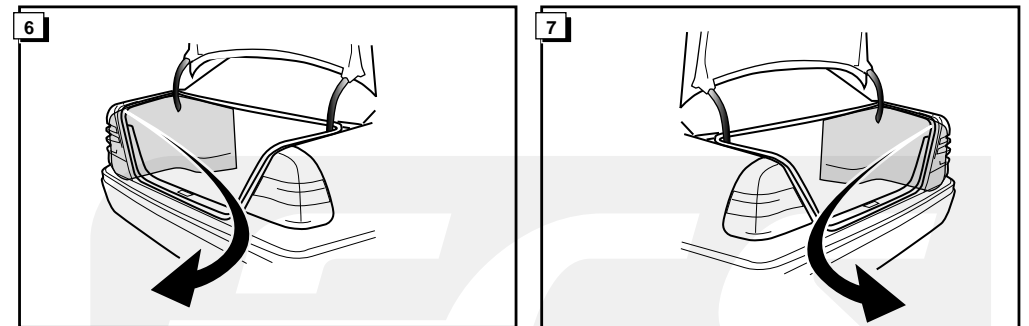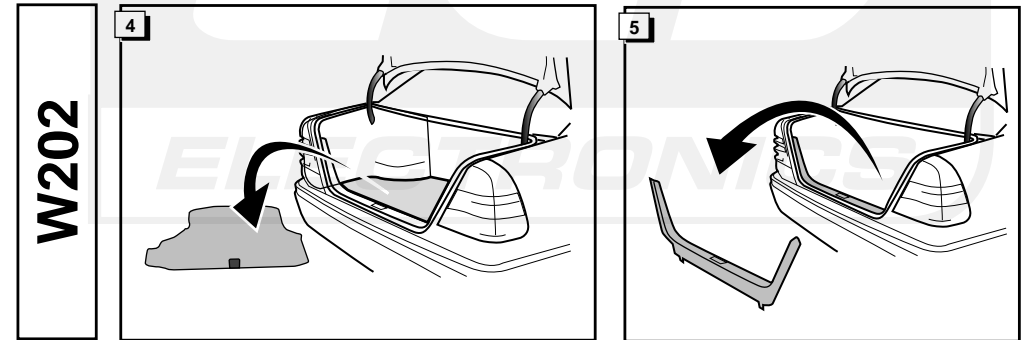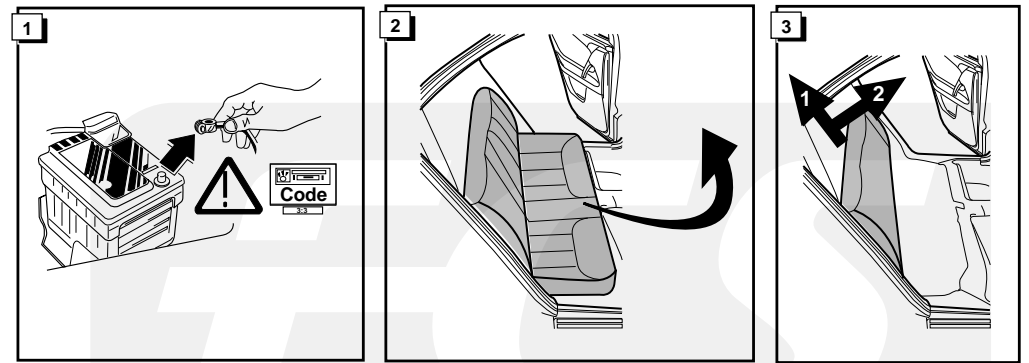

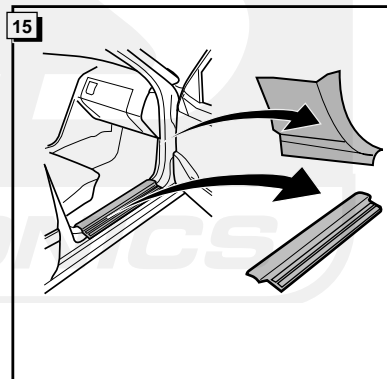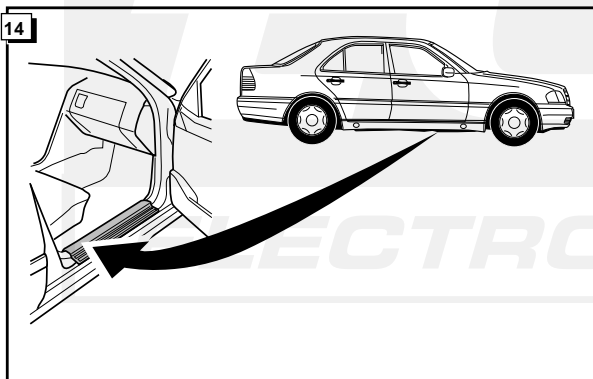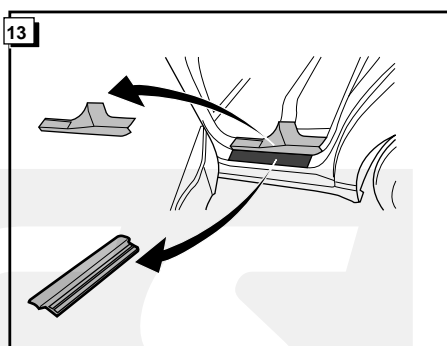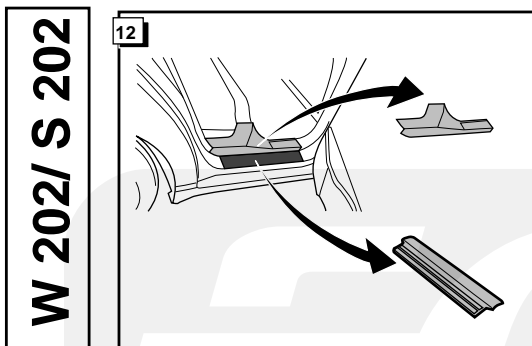
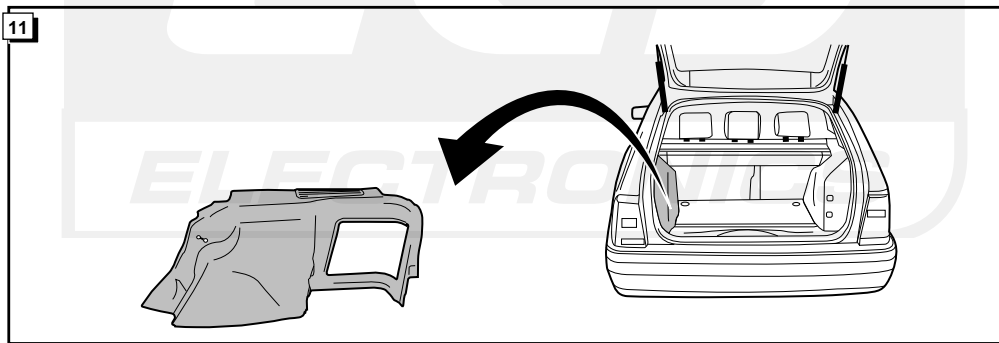
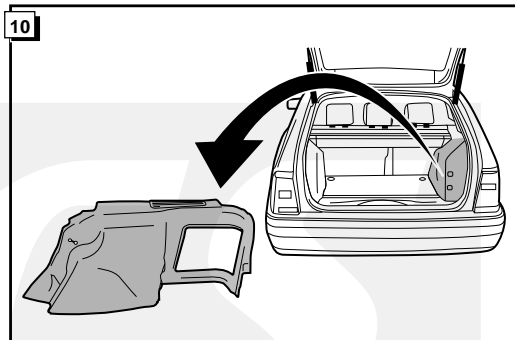
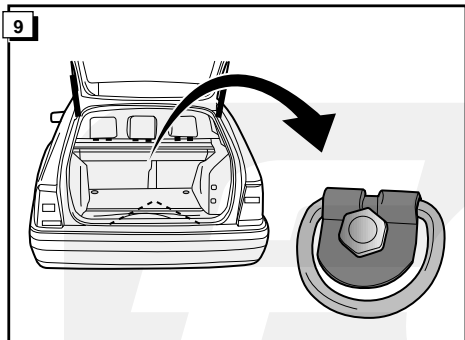


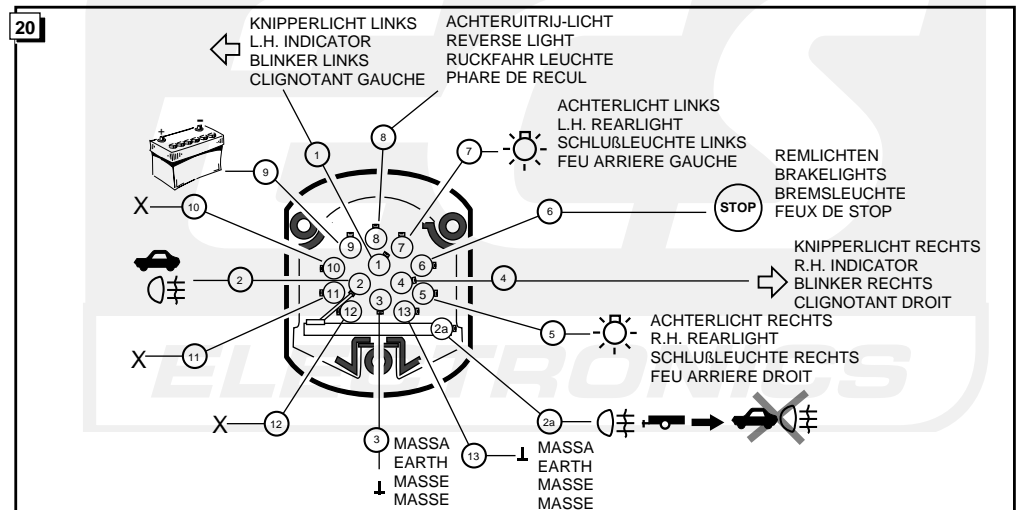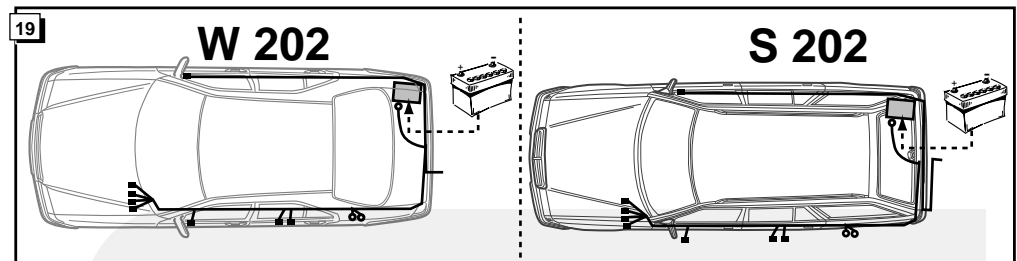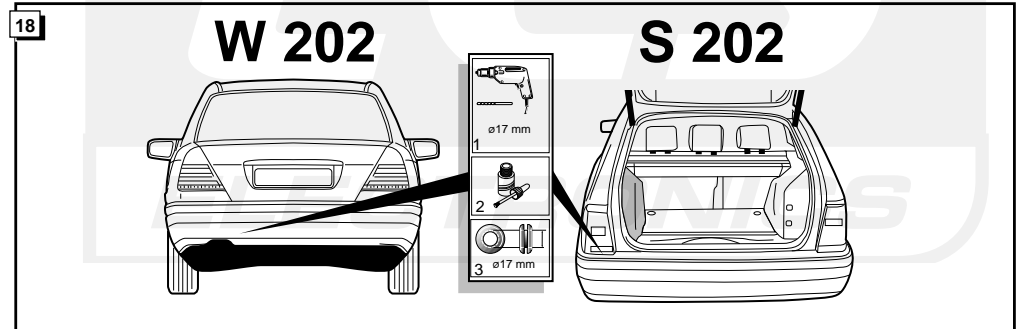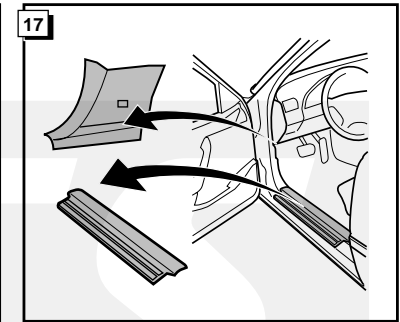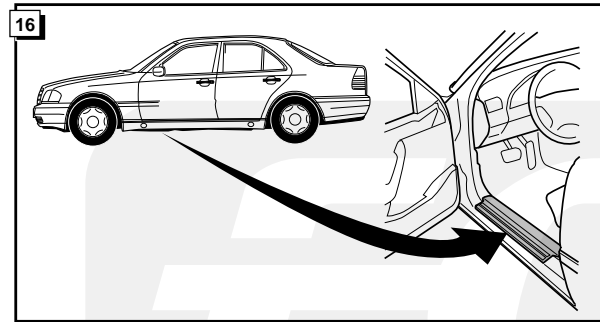

	NL	GB	D	F
1/L	GEEL	YELLOW	GELB	JAUNE
2	BLAUW	BLUE	BLAU	BLEU
2a	GRIJS	GREY	GRAU	GRIS
3/31	WIT	WHITE	WEISS	BLANC
4/R	GROEN	GREEN	GRÜN	VERT
5/58-R	BRUIN	BROWN	BRAUN	MARRON
6/54	ROOD	RED	ROT	ROUGE
7/58-L	ZWART	BLACK	SCHWARZ	NOIR
8	ZWART/ROOD	BLACK/RED	SCHWARZ/ROT	NOIR/ROUGE
9	BRUIN/WIT	BROWN/WHITE	BRAUN/WEIß	MARRON/BLANC
10				
11				
12				
13	WIT	WHITE	WEISS	BLANC

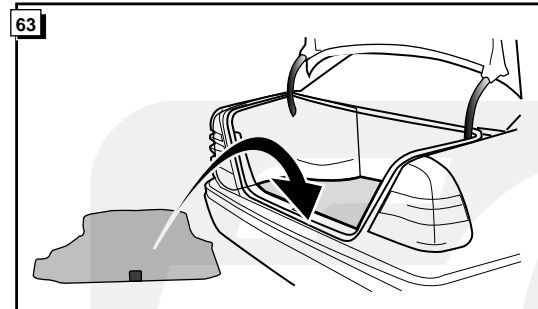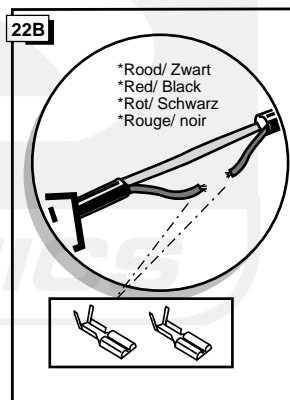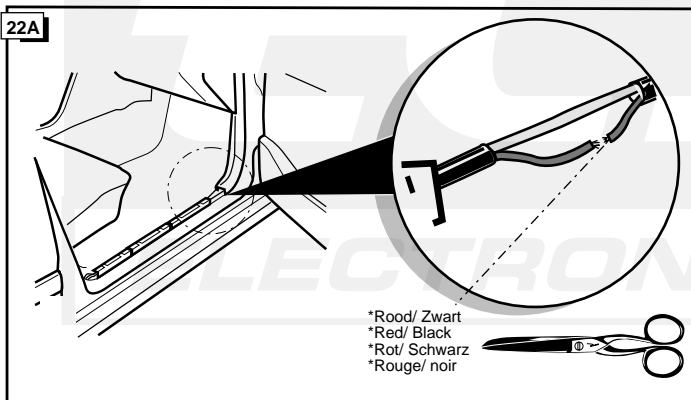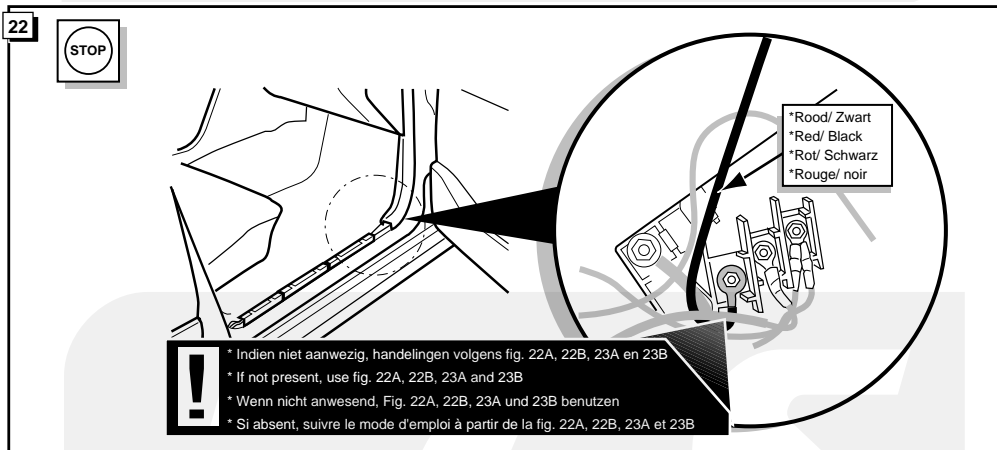

















W 202/ S 202











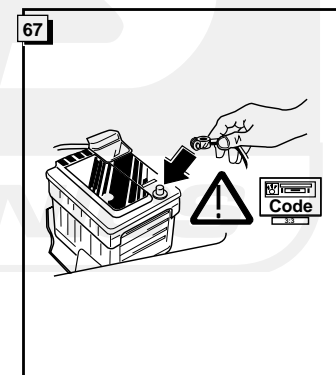
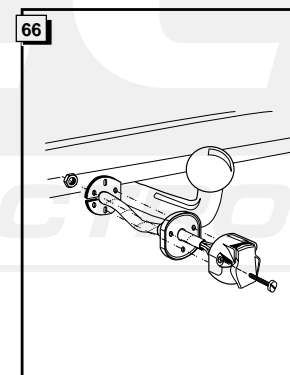
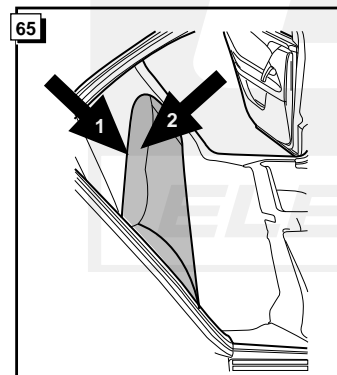
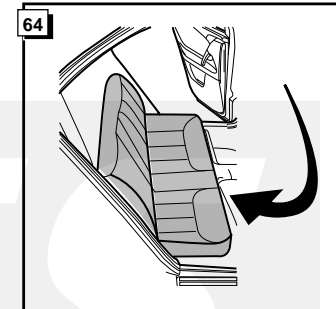


68





! **CONTROLEER FUNCTIES !**
CHECK FUNCTIONS !
FUNKTIONEN KONTROLIEREN !
CONTRÔLER LES FONCTIONS !






S 202

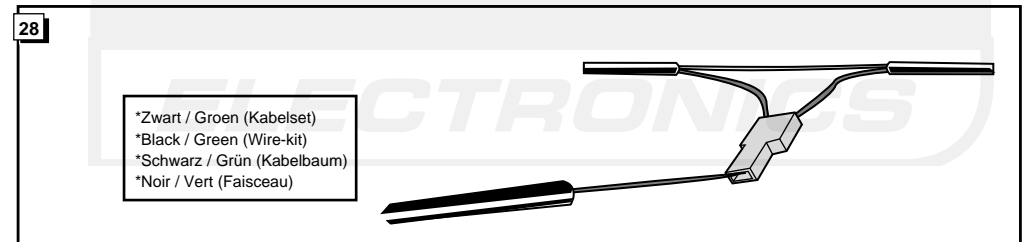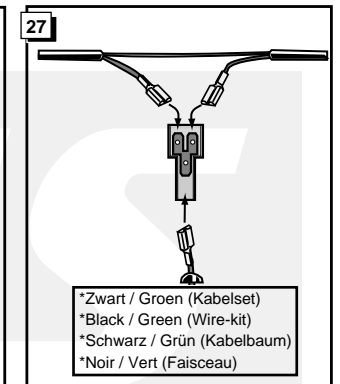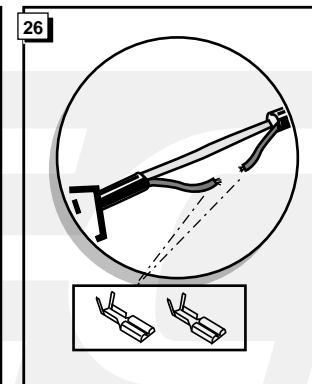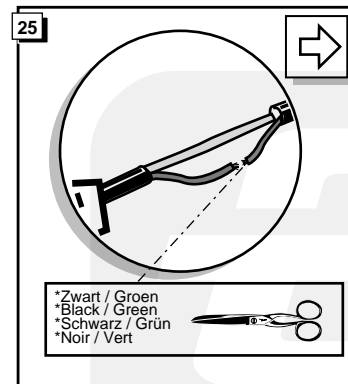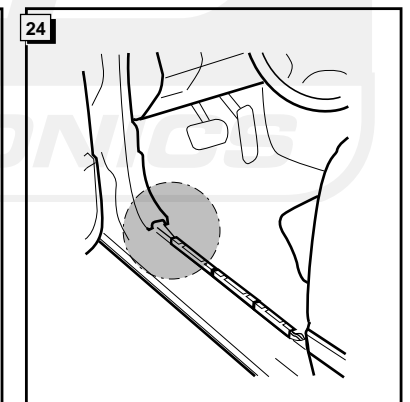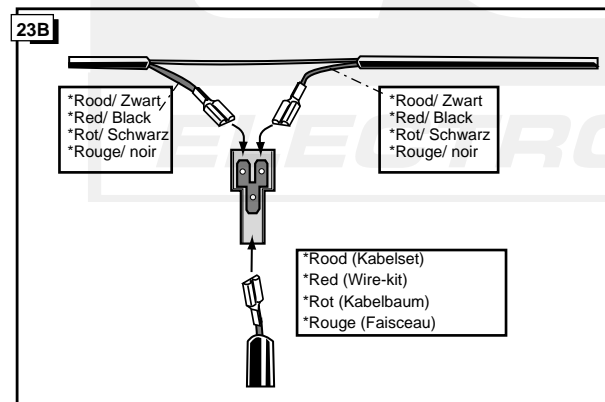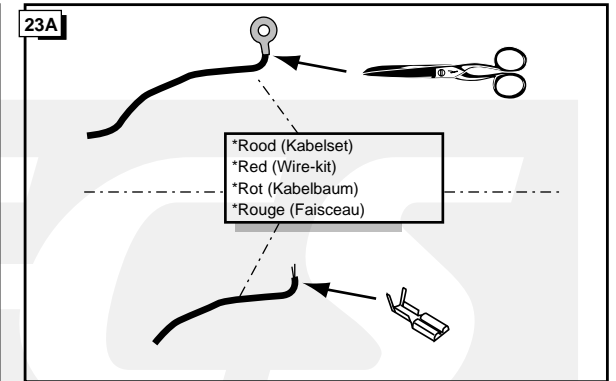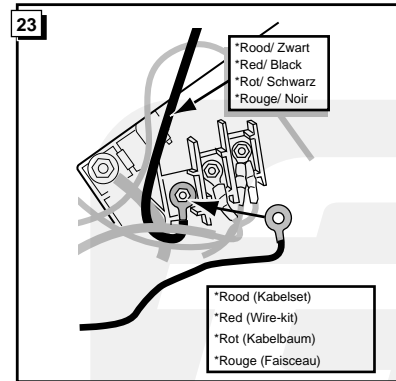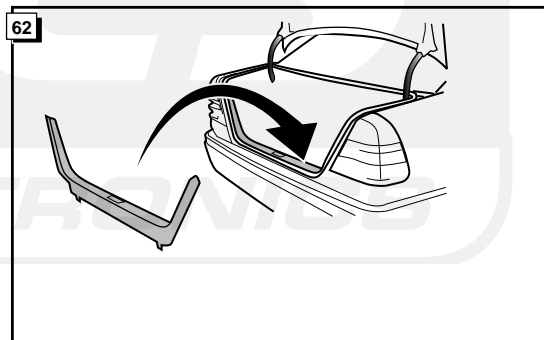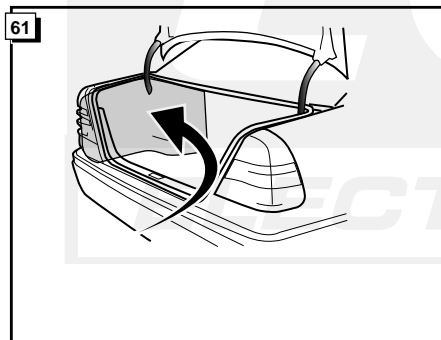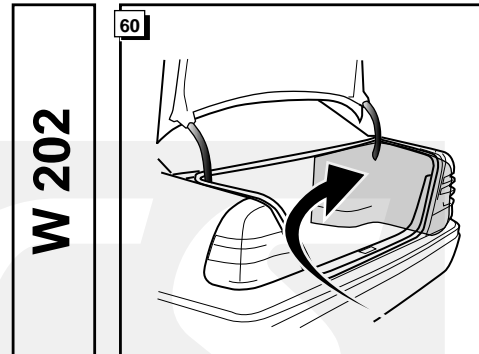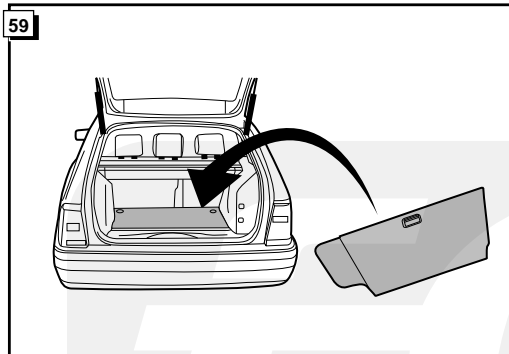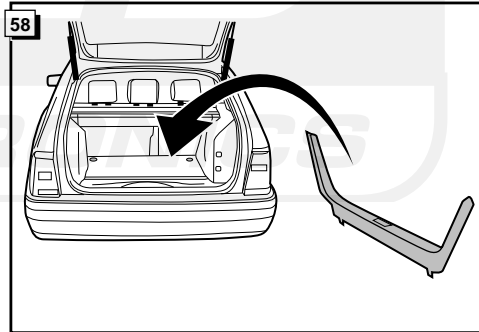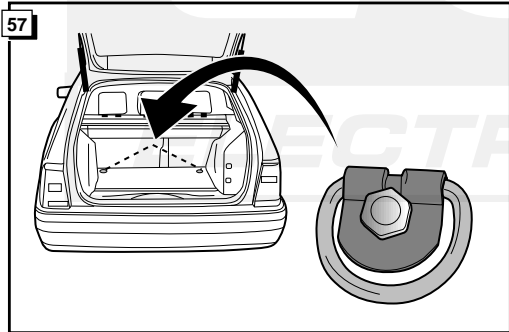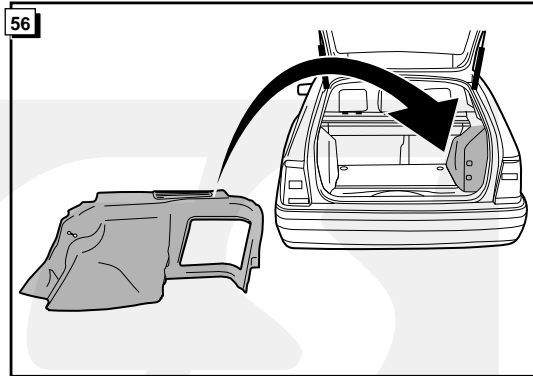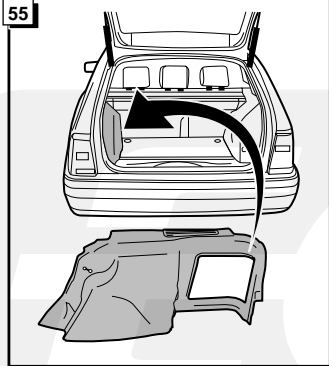

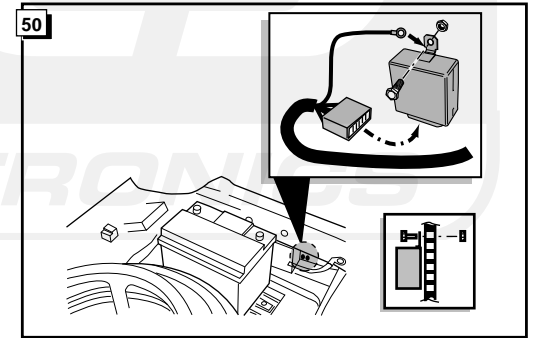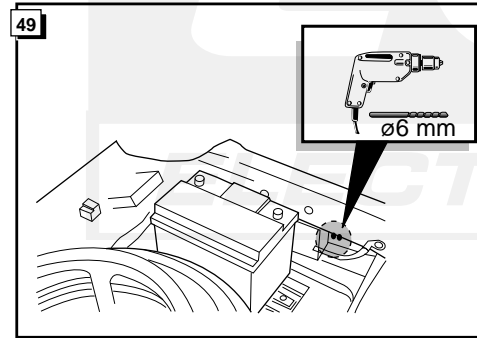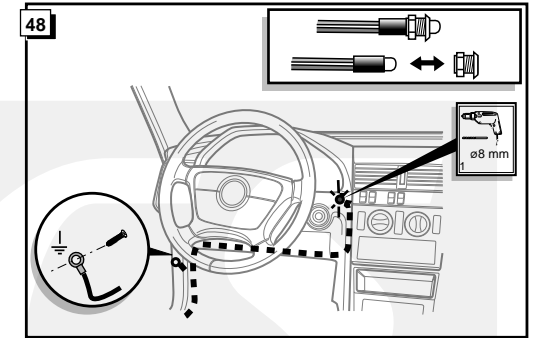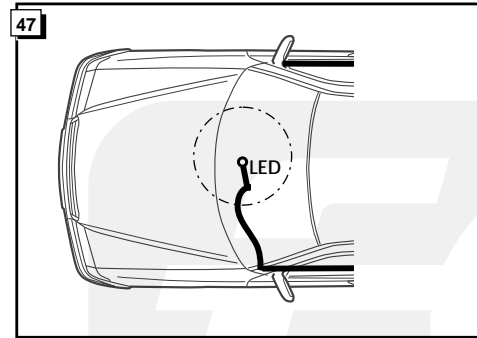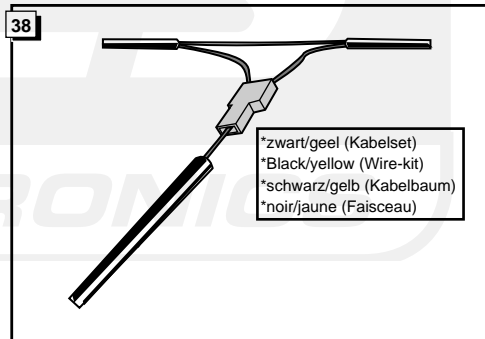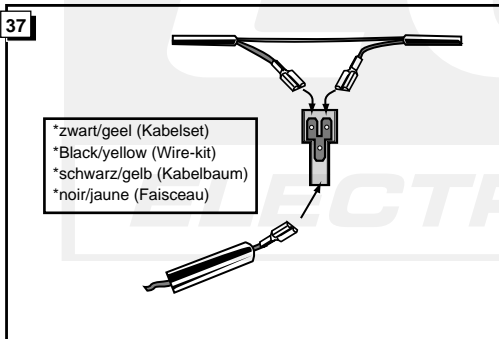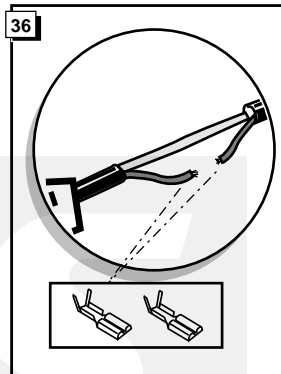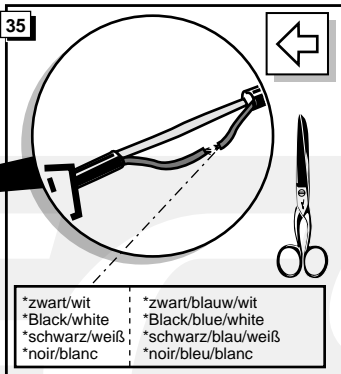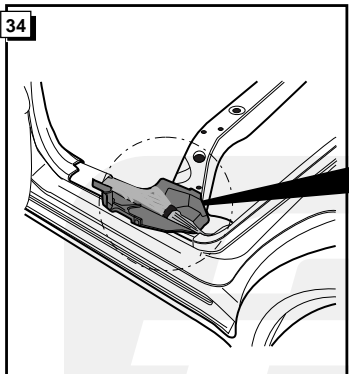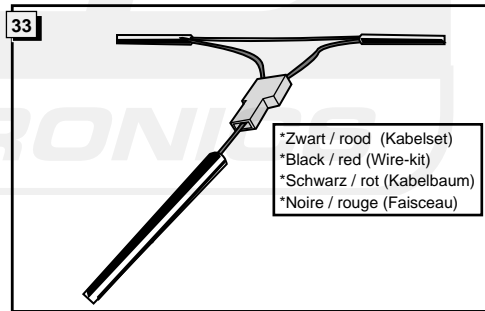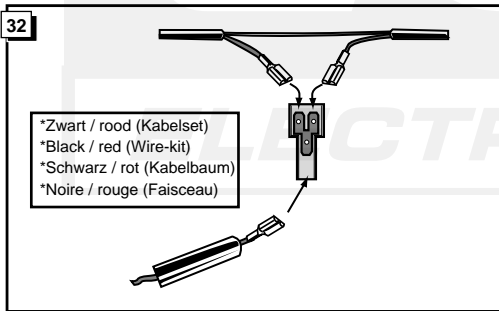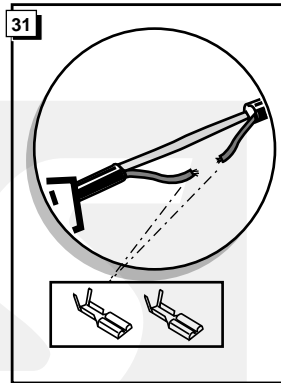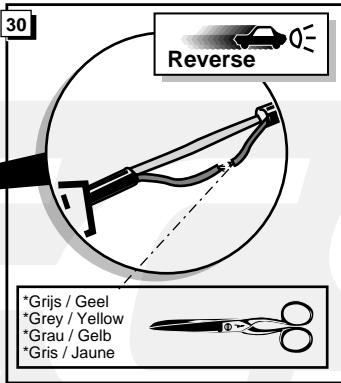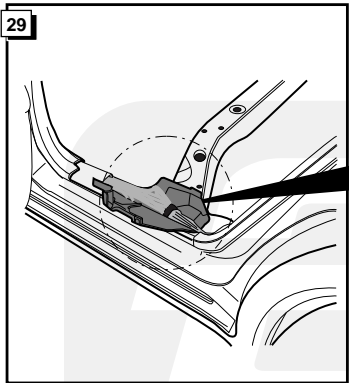


W 202/ S 202

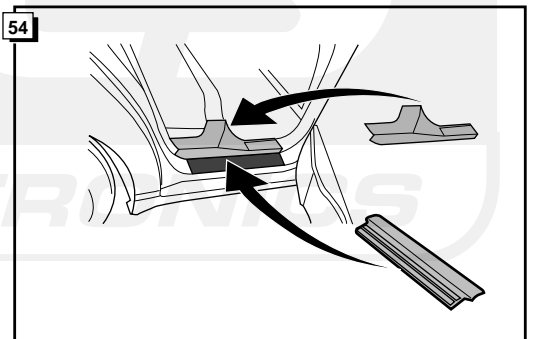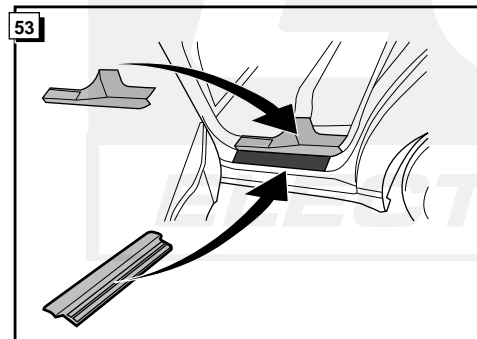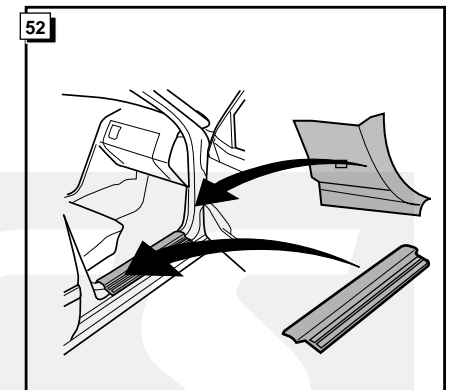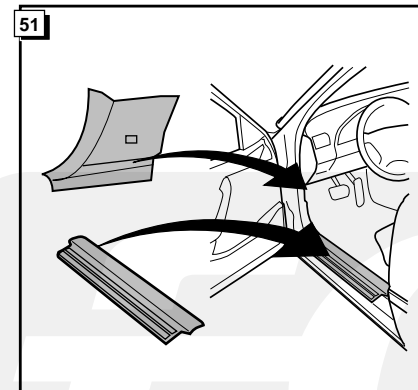

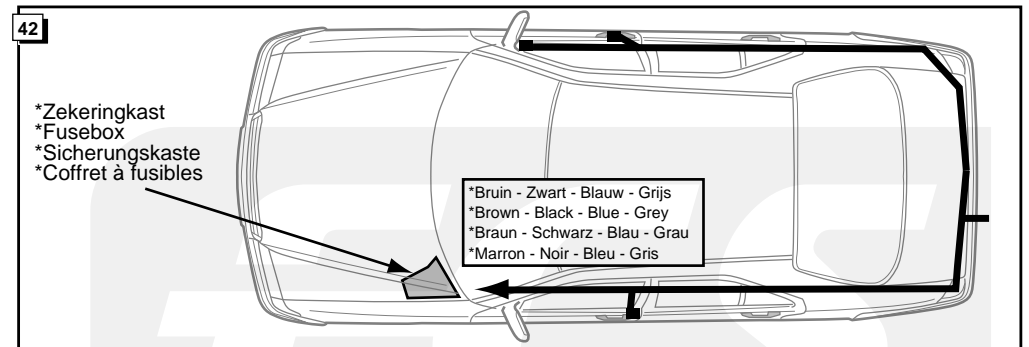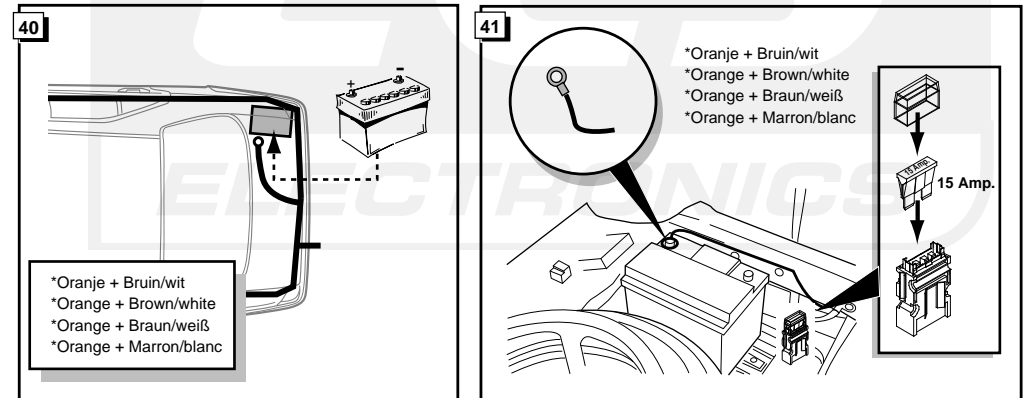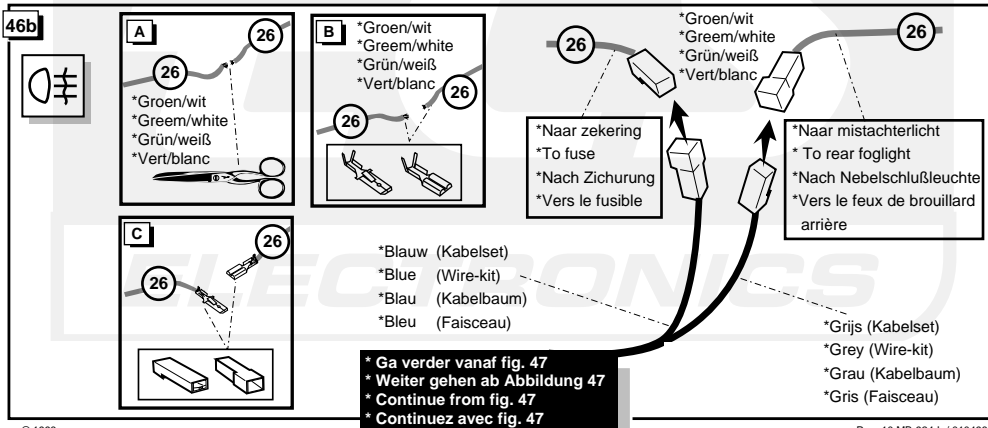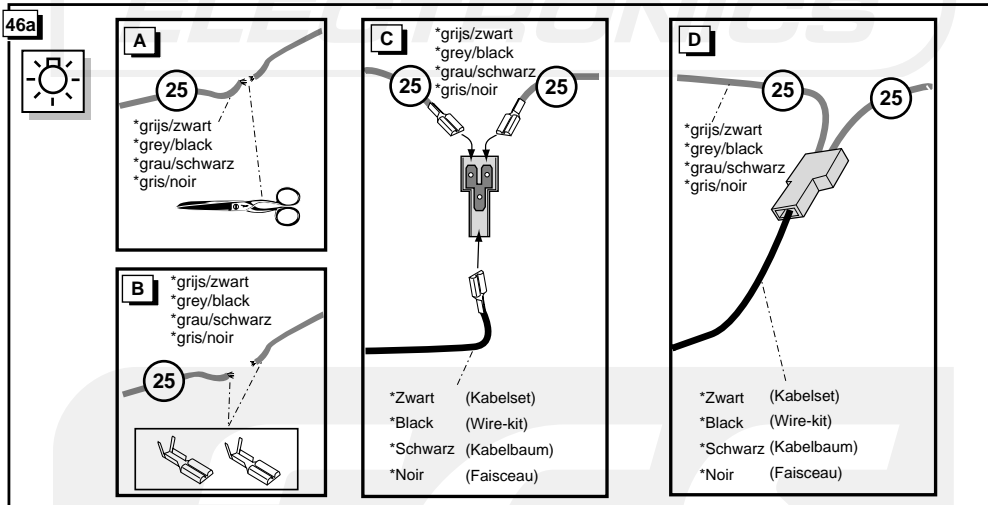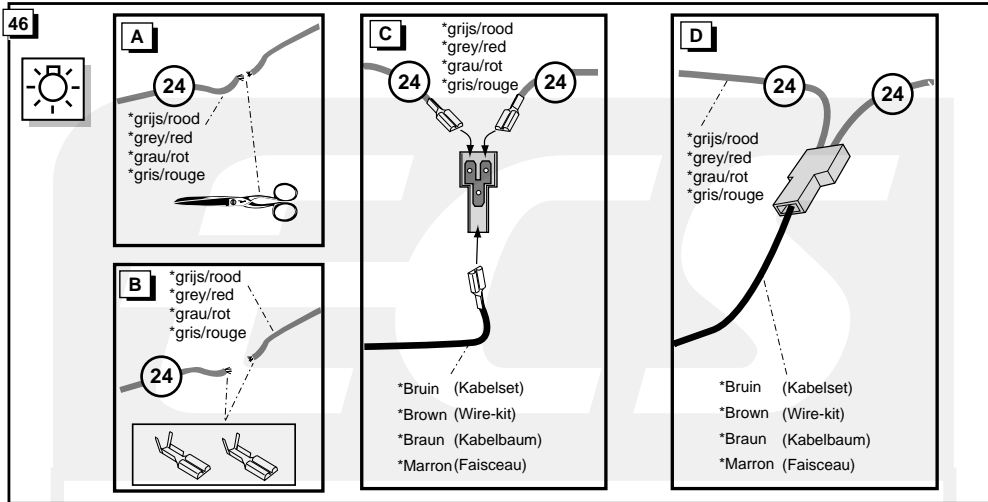

43

	Kabelset-Wiring-harness-Kabelbaum-Faisceau		Zekering-Fuse-Sicherung-Fusible
Voor/before/vor/avant 12/94	Blauw-blue-blau-bleu Grijs-grey-grau-gris	grijs/groen-grey/green-grau/grün-gris/vert	(28)
Zie-See-Sehen-Voir 44	Zwart-black-schwarz-noir Bruin-brown-braun-marron	grijs/groen-grey/green-grau/grün-gris/vert	(28)
12/94 - 5/97	Blauw-blue-blau-bleu Grijs-grey-grau-gris	grijs/zwart-grey/black-grau/schwarz-gris/noir	(18)
Zie-See-Sehen-Voir 45	Zwart-black-schwarz-noir Bruin-brown-braun-marron	grijs/rood-grey/red-grau/rot-gris/rouge	(24)
Na/after/nach/après 5/97	Blauw-blue-blau-bleu Grijs-grey-grau-gris	groen/wit-green/white-grün/weiß-vert/blanc	(17)
Zie-See-Sehen-Voir 46	Zwart-black-schwarz-noir Bruin-brown-braun-marron	groen/wit-green/white-grün/weiß-vert/blanc	(17)
		grijs/zwart-grey/black-grau/schwarz-gris/noir	(16)
		grijs/rood-grey/red-grau/rot-gris/rouge	(15)
		groen/wit-green/white-grün/weiß-vert/blanc	(26)
		groen/wit-green/white-grün/weiß-vert/blanc	(26)
		grijs/zwart-grey/black-grau/schwarz-gris/noir	(25)
		grijs/rood-grey/red-grau/rot-gris/rouge	(24)

