


Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724


Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme DIN/ISO 1724  
prise 12-N

Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724

Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlg. DIN/ISO norm 1724

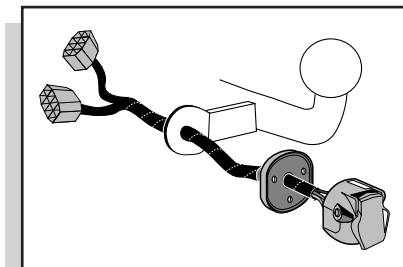

## TOYOTA RAV-4 09-1997-

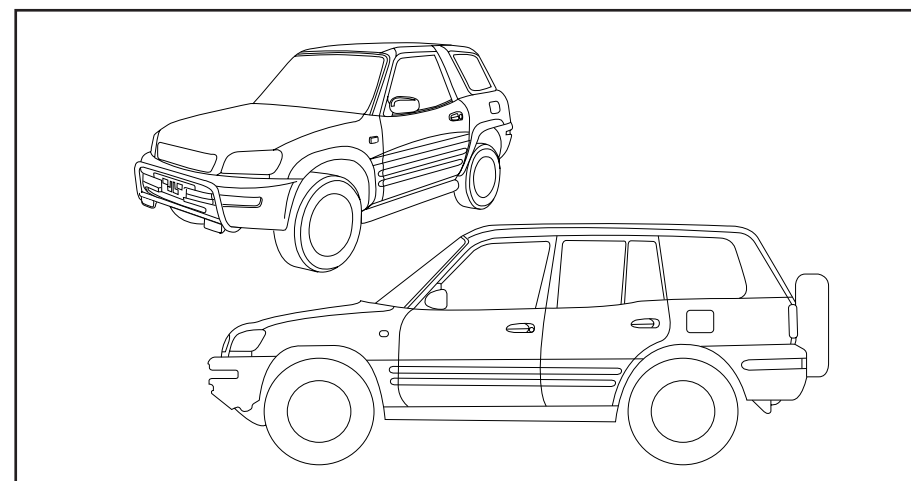

Bestel Nr.: TO-013-BB







\*\* 5 Türen Model sehe 9





\*\* 5 portes modèle voir fig. 9

\*\* 5 drs model see fig. 9


\*\* 5 drs model zie fig. 9

\*\* 3 Türen Model \*\* 3 portes modèle \*\* 3 drs model \*\* 3drs model

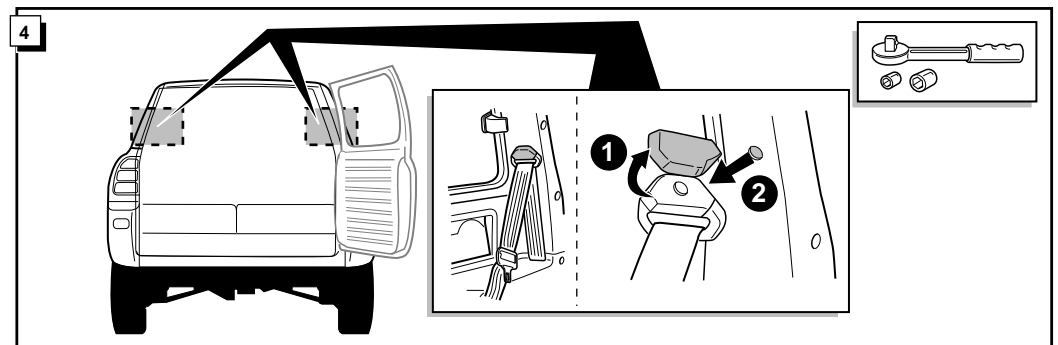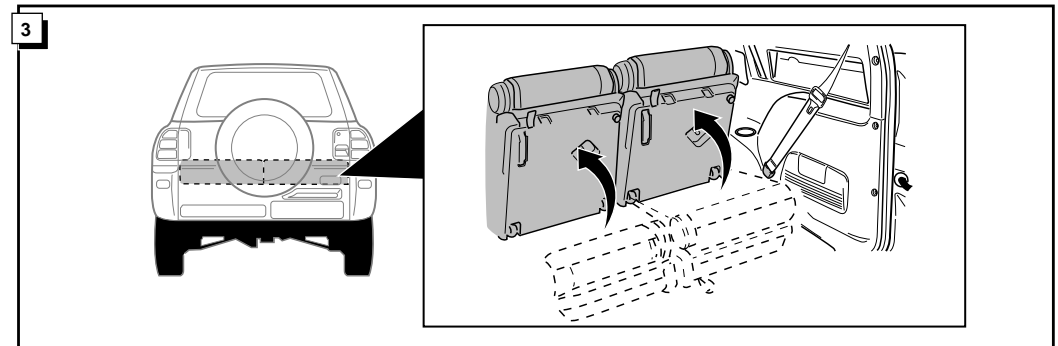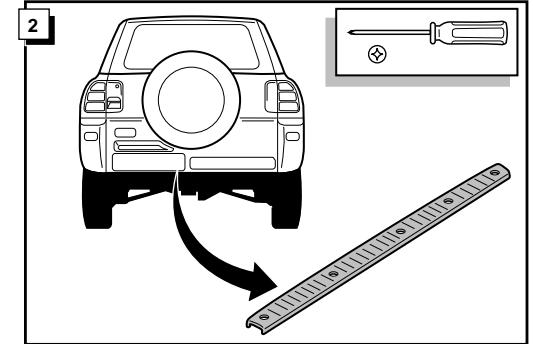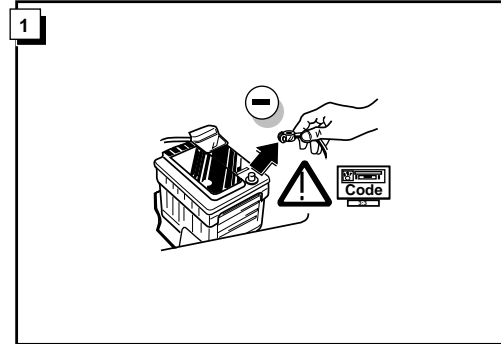

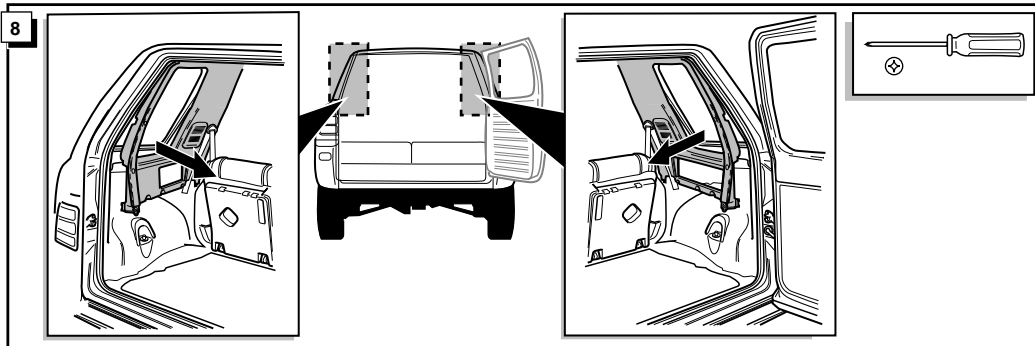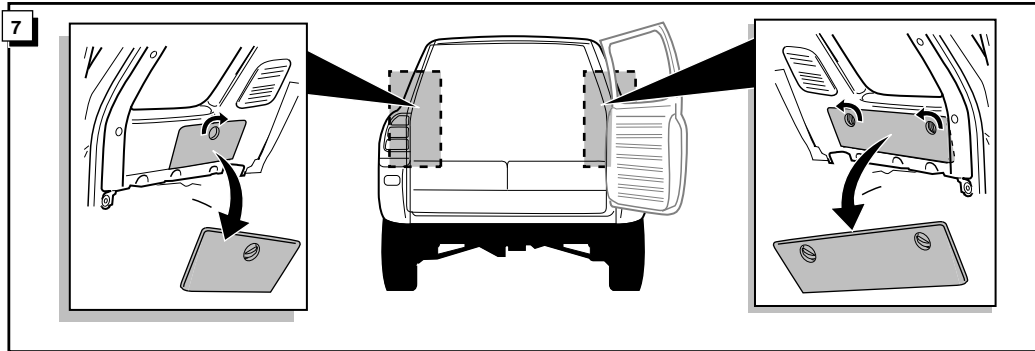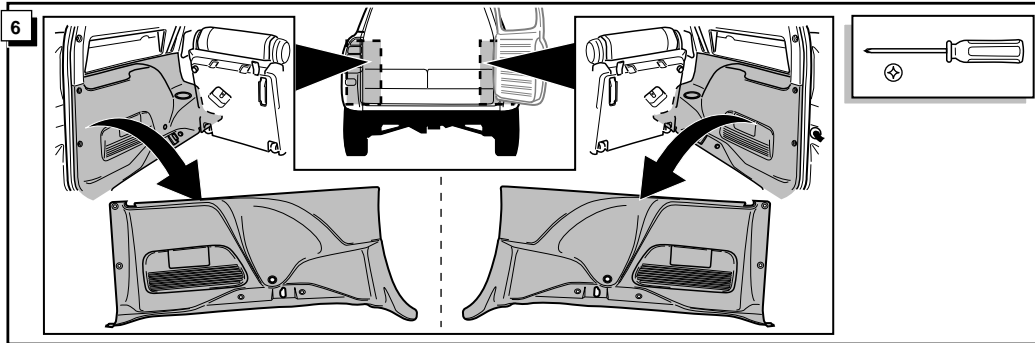
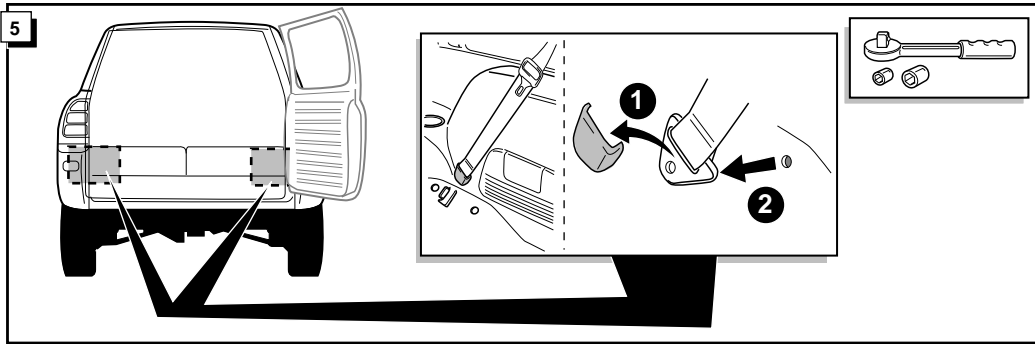


36

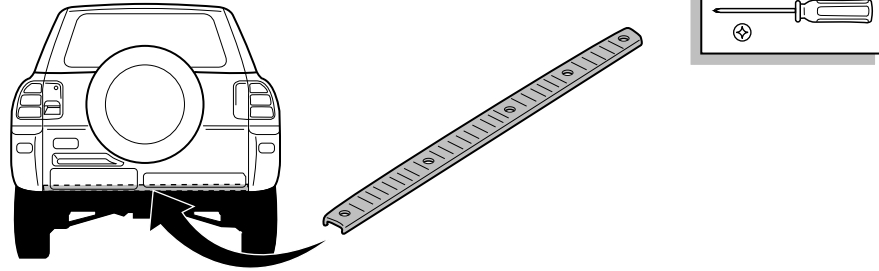


\*\* 5 Türen Model \*\* 5 portes modèle \*\* 5 drs model \*\* 5 drs model


9

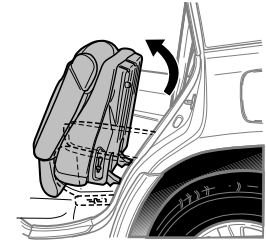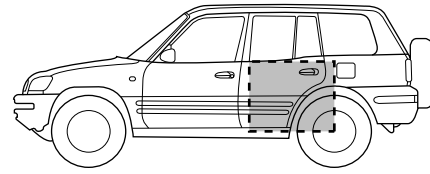





37

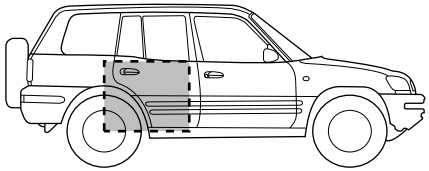




38

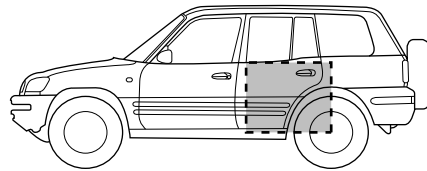




10

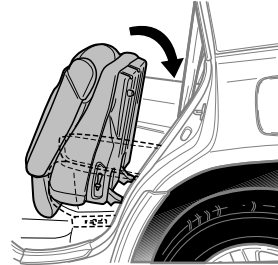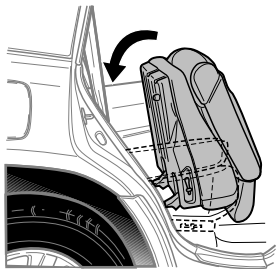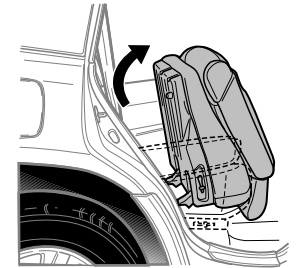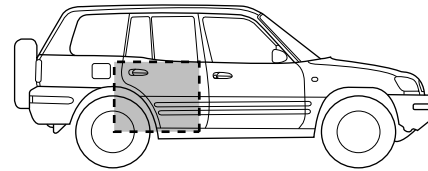


11





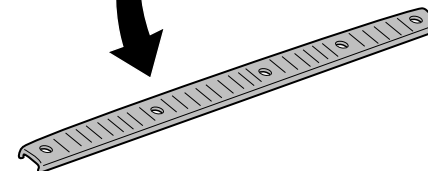
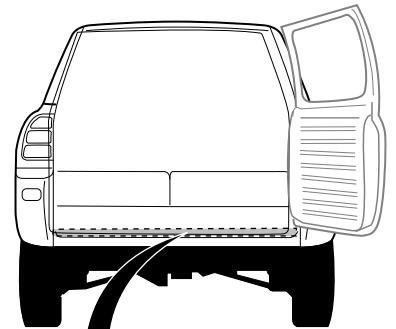



12

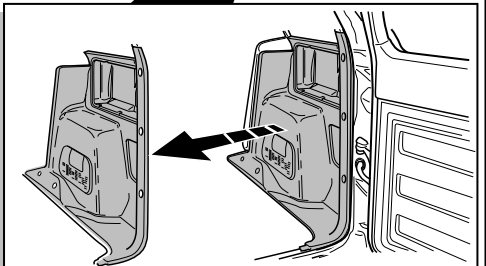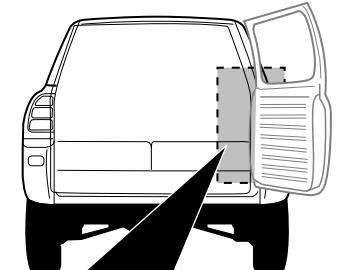


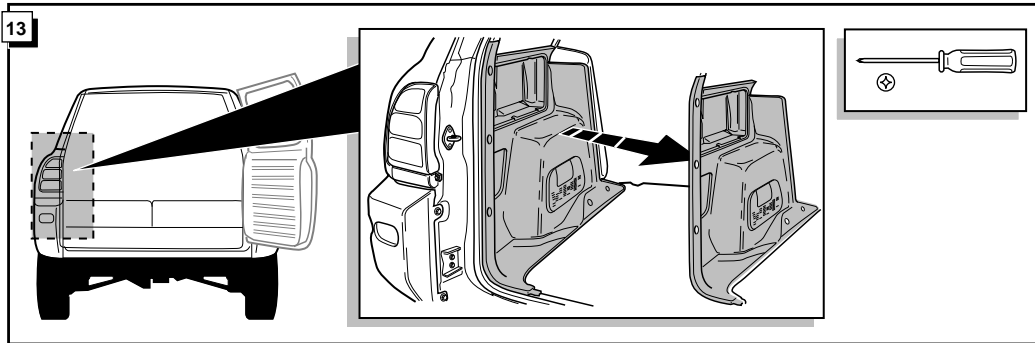


\*\* 3 Türen Model    \*\* 3 portes modèle    \*\* 3 drs model    \*\* 3drds model  
 \*\* 5 Türen Model    \*\* 5 portes modèle    \*\* 5 drs model    \*\* 5drds model

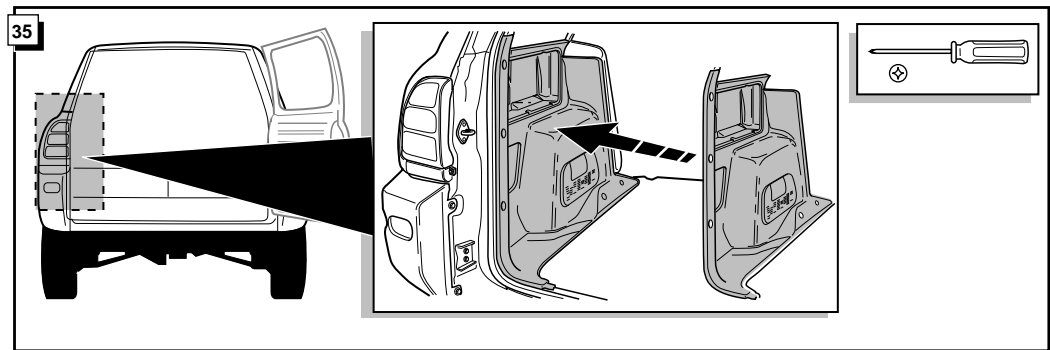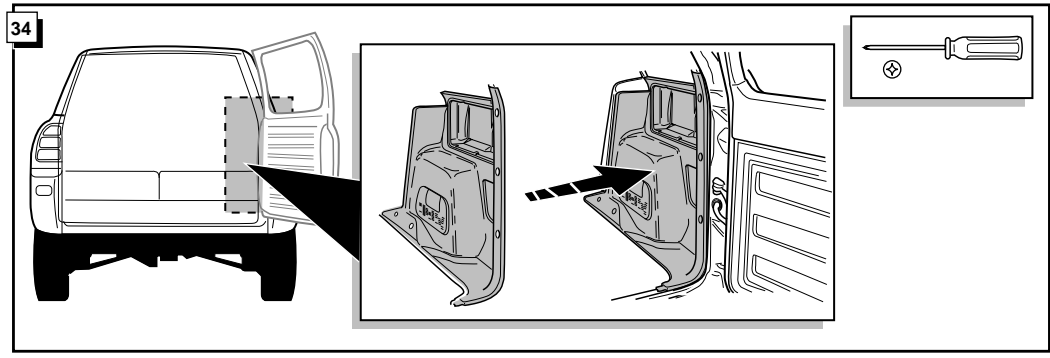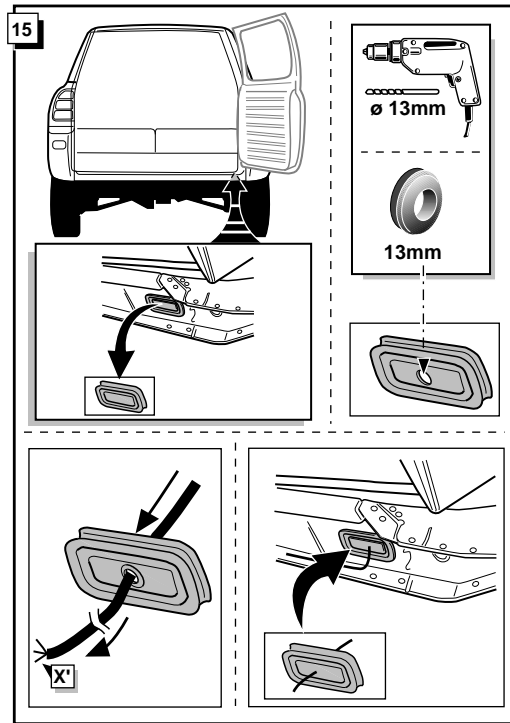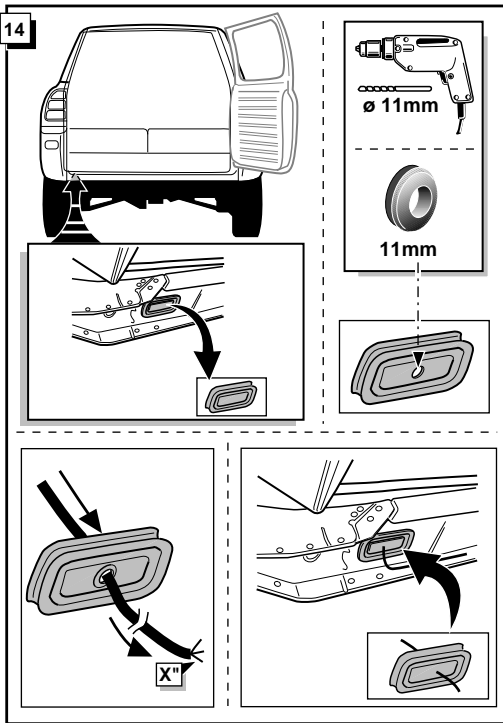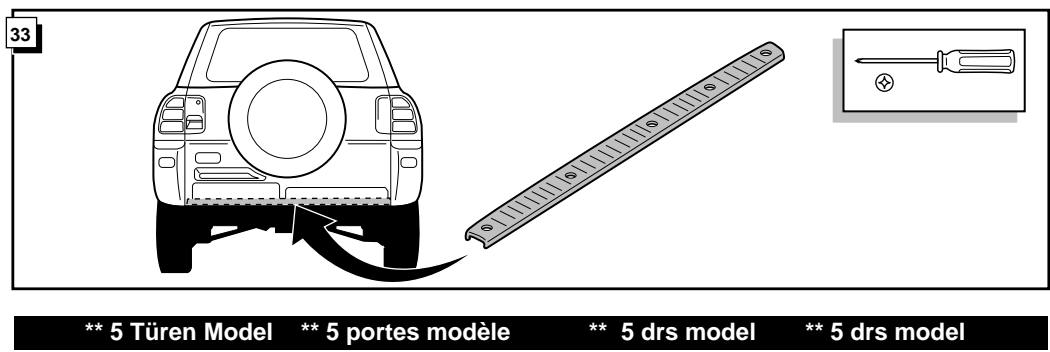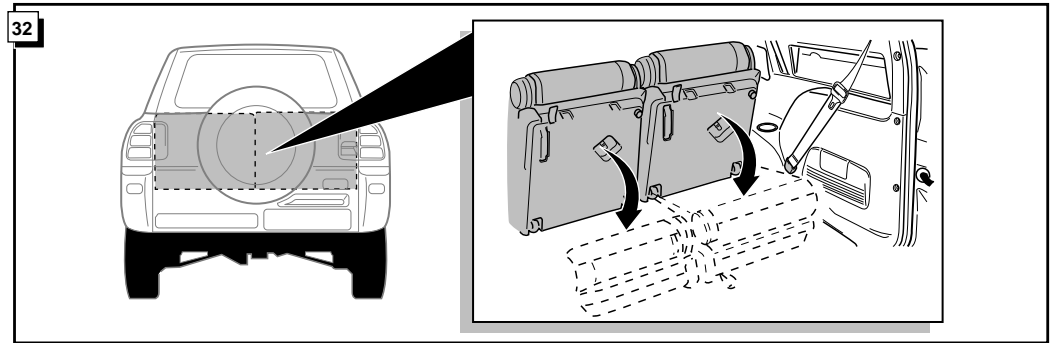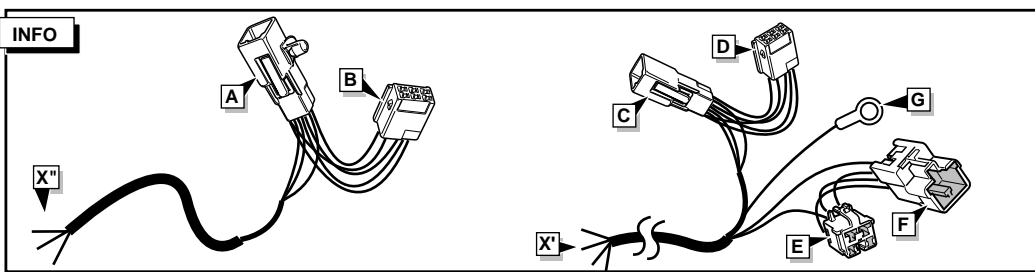


28

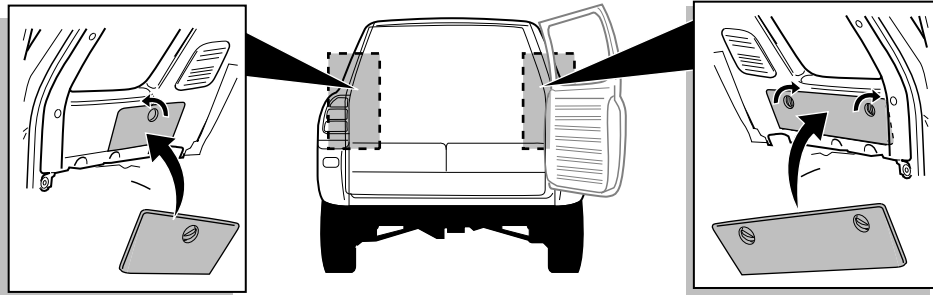


29

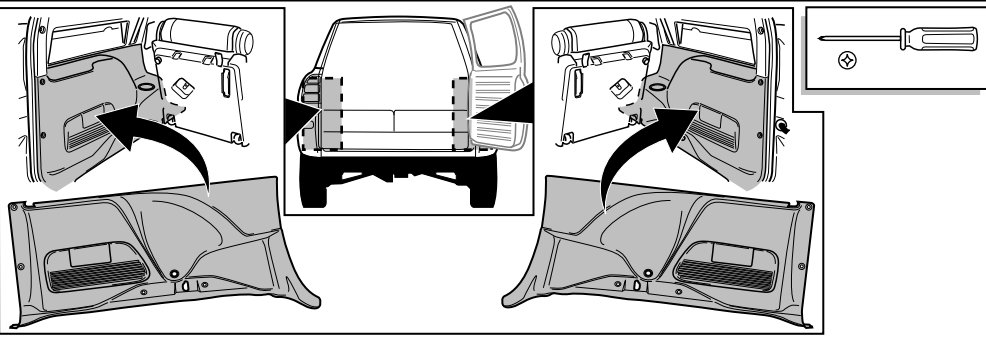

30

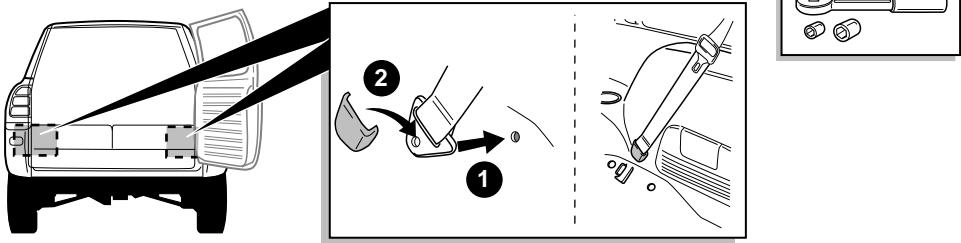


31

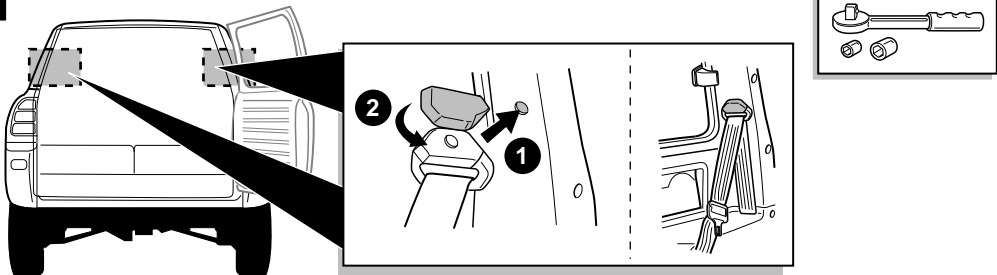


ROUTING

\*\* 3 und 5 Türen Model  
 \*\* 3 et 5 portes modèle  
 \*\* 3 and 5 drs model  
 \*\* 3 en 5 drs model

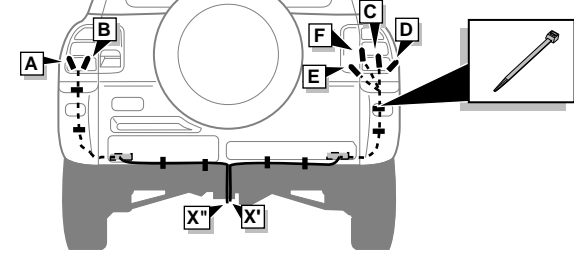



\*\* 3 Türen Model  
 \*\* 3 portes modèle  
 \*\* 3 drs model  
 \*\* 3 drs model

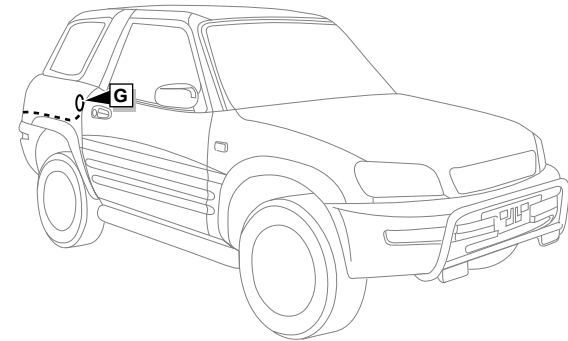


ROUTING

\*\* 5 Türen Model  
 \*\* 5 portes modèle  
 \*\* 5 drs model  
 \*\* 5 drs model

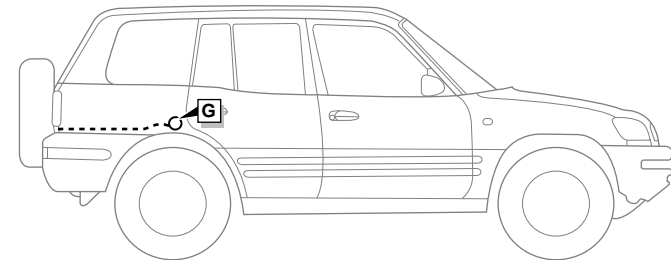

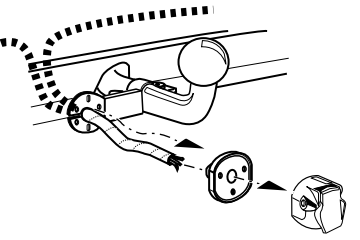**16** **1** 

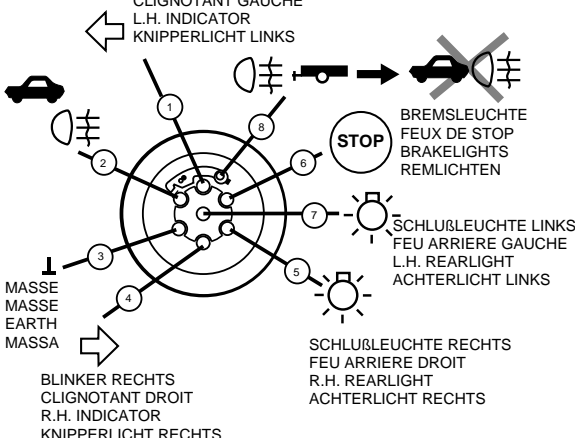**2** 

BLINKER LINKS  
CLIGNOTANT GAUCHE  
L.H. INDICATOR  
KNIPPERLICHT LINKS

STOP  
BREMSLEUCHE  
FEUX DE STOP  
BRAKELICHTS  
REMLICHTEN


SCHLÜßLEUCHE LINKS  
FEU ARRIERE GAUCHE  
L.H. REARLIGHT  
ACHTERLICHT LINKS

MASSE  
MASSE  
EARTH  
MASSA


BLINKER RECHTS  
CLIGNOTANT DROIT  
R.H. INDICATOR  
KNIPPERLICHT RECHTS


SCHLÜßLEUCHE RECHTS  
FEU ARRIERE DROIT  
R.H. REARLIGHT  
ACHTERLICHT RECHTS

D	FR	GB	NL
1 = L	GELB	JAUNE	YELLOW
2 = 54-G	BLAU	BLEU	BLUE
3 = 31	WEIß	BLANC	WHITE
4 = R	GRÜN	VERT	GREEN
5 = 58-R	BRAUN	MARRON	BROWN
6 = 54	RÖT	ROUGE	RED
7 = 58-L	SCHWARZ	NOIR	BLACK
8 = 58-B	GRAU	GRIS	GREY
			GEEL BLAUW WIT GROEN BRUIN ROOD ZWART GRIJS

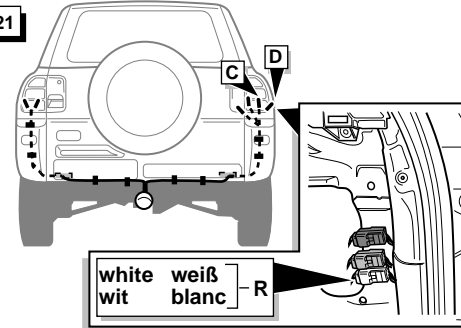
**21** 


white weiß  
wit blanc - R

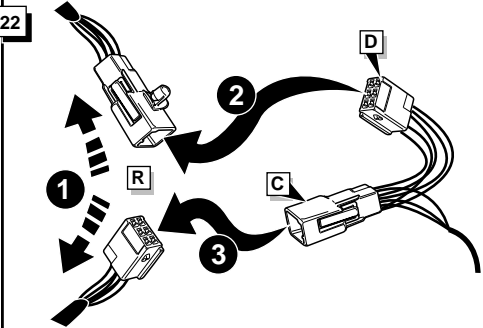
**22** 

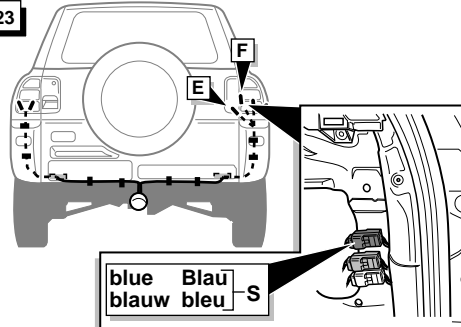
**23** 

blue Blau  
blauw bleu - S

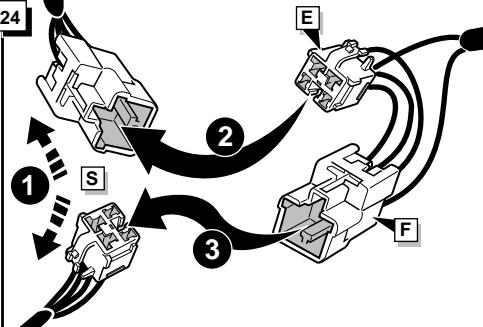
**24** 

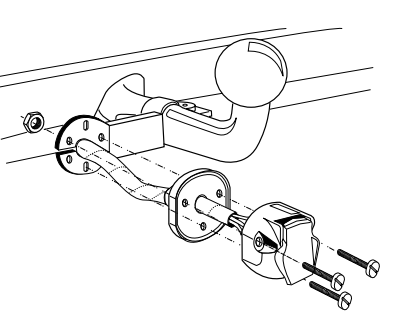**17** 

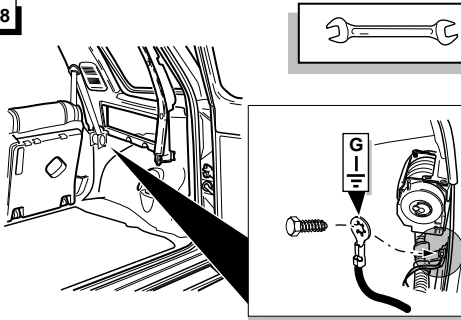**18** 

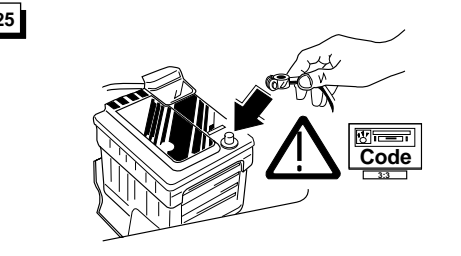
**25** 

Code


**26** 

**FUNKTIONEN KONTROLIEREN !**  
**CONTRÔLER LES FONCTIONS !**  
**CHECK FUNCTIONS !**  
**CONTROLEER FUNCTIES !**

\*\* 3 Türen Model \*\* 3 portes modèle \*\* 3 drs model \*\* 3drs model

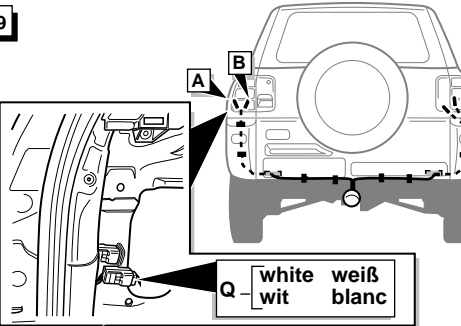**19** 

white weiß  
wit blanc - Q

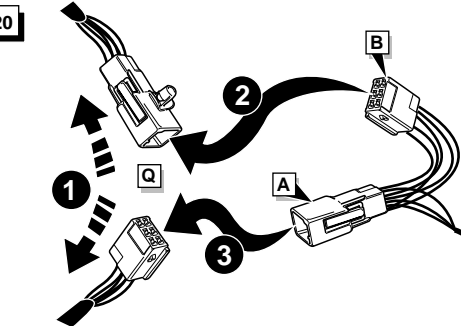**20** 

**27** 